
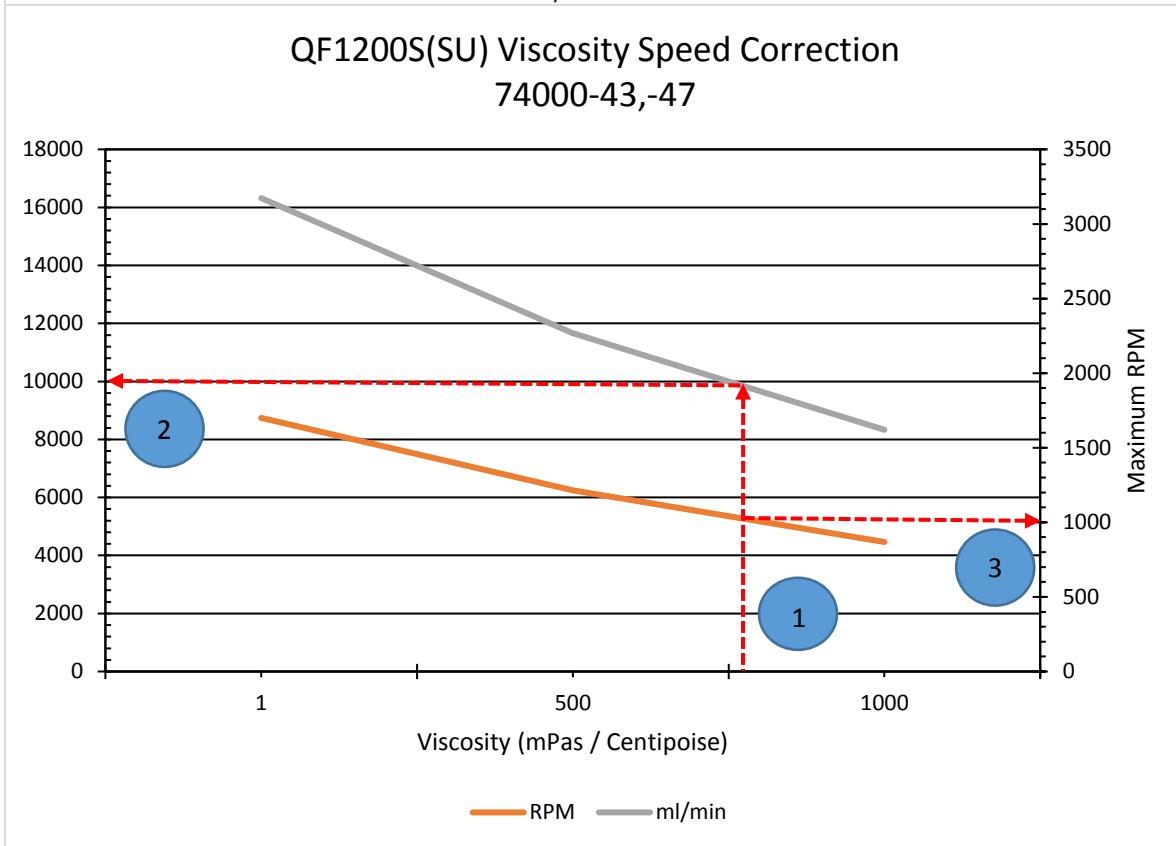


Masterflex™ Quattroflow Viscosity Correction

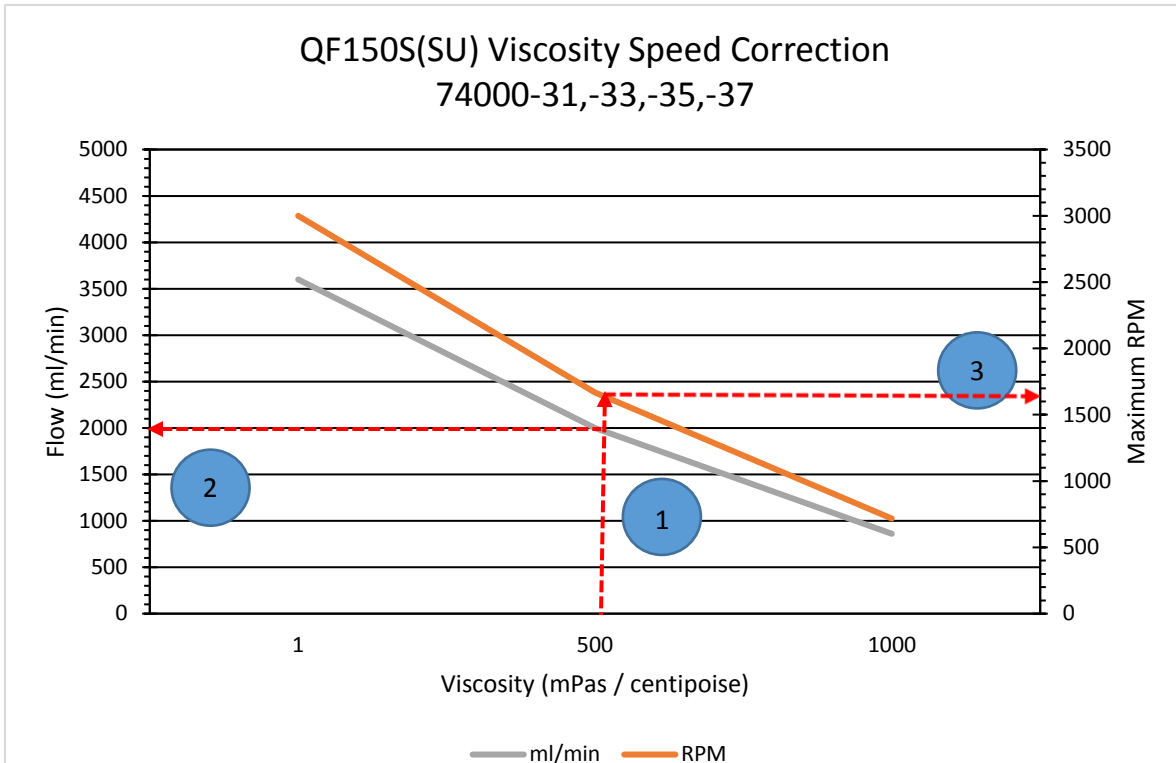

1. Enter chart at known fluid viscosity in mPas or centipoise
2. Move up the chart to the flowrate curve (grey) and read max flow range to the left axis
3. Move back down to the orange curve and read Maximum speed