


INSTALLATION INSTRUCTIONS


1) Probe sensor:

Place the submersible probe inside the tank and press the suction cup against the inner wall.

Choose a position which is less affected by light or plant for more reliable readout.

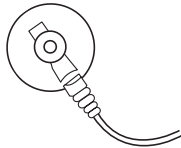

2) Unit: Remove the protective paper of the double-sided tape and press the unit against any clean surface for mounting. Convenient position may be the outside wall of the tank.

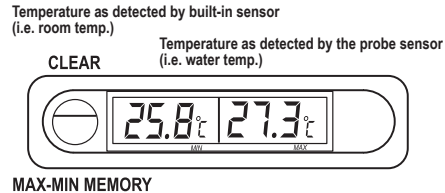


OPERATING INSTRUCTIONS

1) Temperature readouts will display after battery is inserted.

2) Press MAX-MIN MEMORY button will display maximum and minimum, readouts of room temperature. Second press will display maximum and minimum readouts of water temperature. Third press, or after 8 seconds the display will show current temperature readout.

3) If you press CLEAR after maximum or minimum temperature readout is recalled from the record, you will start a new memory record and the old one is erased. Maximum/Minimum temperature is the Highest/Lowest temperature readout as picked up from the accumulated temperature readouts. Thus you can specify, HOURLY, DAILY, WEEKLY, MONTHLY Room/Water max-min memory record by yourself.

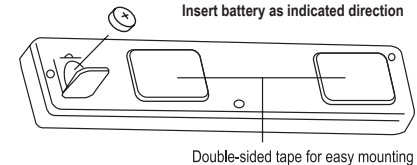

**TRACEABLE®
STICK
THERMOMETER
INSTRUCTIONS**