



USER MANUAL

SAMPLER P/N Z-LITE-IAQ

Please read and understand all instructions before using this product.

IMPORTANT SAFETY INFORMATION

- DO NOT – attempt to service the sampling pump while it is running or while it is connected to electrical power.
- DO NOT – oil the pump.
- DO NOT – kink power cord, and never allow the cord to come in contact with oil, grease, hot surfaces, or chemicals.
- DO NOT – use ungrounded electrical receptacles.
- DO NOT – use undersized electrical extension cords or wiring.
 - DO – protect all power cords from damage or puncture.
 - DO – protect clear airline from damage or puncture.
 - DO – use grounded electrical connections.
 - DO – disconnect power source before attempting to service sampling pump.
 - DO – make certain that the power source conforms to the requirements of your equipment.
 - DO – change inlet and outlet filters (inside jars) during regular cleaning and maintenance between jobs.

NOTE: For information on how to operate sampling pumps, please contact our Customer Service Department.

OPERATING INSTRUCTIONS

1. Unpack Sampling Pump
2. Plug into standard 110V outlet.
3. Connect 6-foot clear tubing to regulator inlet. Run other end of tube through hole at top of stand and connect the needed sampling cassette. Adjust cassette angle by pulling tubing through hole.
4. Open stand by pulling legs out and down until fully extended. Adjust stand height by loosening clutch, raising stand, and tightening clutch. Repeat on each section.
5. Turn on pump.
6. Set flow rate.