

The N-TRON® 306FX2 is an unmanaged six port Industrial Ethernet Switch. It is housed in a ruggedized DIN-RAIL enclosure and is designed for use in industrial data acquisition, control, and Ethernet I/O applications.

## PRODUCT FEATURES

- Compact Size, Small Footprint
- Full IEEE 802.3 and 1613 Compliance
- NEMA TS1/TS2 Compliance
- American Bureau of Shipping (ABS) Type Approval
- Extended Environmental Specifications
- Four 10/100 BaseTX RJ-45 Ports
- Two 100BaseFX Port ST (shown) or SC
- RJ-45 Ports Support Full/Half Duplex Operation
- LED Link/Activity Status Indication
- Store-and-Forward Technology
- Auto Sensing Duplex, Speed and MDIX (RJ-45)
- Up to 1.0 Gb/s Maximum Throughput
- Rugged Industrial DIN-RAIL Enclosure
- Redundant Power Inputs (10-30 VDC)
- N-View™ OPC Switch Monitoring Option

## PRODUCT OVERVIEW

The 306FX2 industrial network switch is designed to meet and exceed the most demanding industrial communication requirements while providing high throughput and minimum downtime.

The 306FX2 provides four RJ-45 auto sensing 10/100BaseTX ports, plus two fiber-based Fast Ethernet uplink ports. All TX ports utilize state-of-the-art Ethernet switching technology and are full/half duplex capable. The 306FX2 auto-negotiates the speed and flow control capabilities of the four TX port connections and configures itself automatically. The two fiber optic ports utilize industry standard ST or SC duplex connectors and are configured for full duplex operation. Both multimode and singlemode fiber models are available.

The TX ports of the 306FX2 are auto sensing, so there will be no need to make extensive wiring changes due to future upgrades of host computers, plant systems, or Ethernet I/O modules. The switching fabric simply scales up or down automatically to match network environments.

The 306FX2 supports up to 4,000 MAC addresses, enabling these products to support extremely sophisticated and complex network architectures.

The 306FX2 is an ideal candidate for upgrading existing hubs and repeaters to increase bandwidth and determinism by virtually eliminating network collisions. The product provides a cost-effective solution while maintaining the plug & play simplicity of an unmanaged hub.



The 306FX2 can simplify plant wiring by eliminating the need to bring data acquisition and control network connections back to a climate controlled environment. The 306FX2 has extended operating environmental specifications to meet the harsh needs of the industrial environment. For cost savings and convenience the 306FX2 can be DIN-Rail mounted alongside Ethernet I/O or other industrial equipment.

The unique compact size provides a small footprint, conserving space in the most critical dimension. The 306FX2 can also be panel mounted if desired.

To increase reliability, the 306FX2 includes redundant power inputs. LED's are provided to display the link status and activity of each port, as well as power on/off status.

### N-VIEW OPC PORT MONITORING (With -N Option Only)

The N-TRON N-View OLE for Process Control (OPC) server software can be combined with popular HMI software packages to add network traffic monitoring, trending and alarming to any application using N-TRON switches configured with the N-View option. N-TRON's N-View OPC Server collects 41 different traffic variables per port and 5 system level variables per switch. This information can provide a complete overview of the network load, service quality, and packet traffic. OPC client software can use N-View OPC Server data to resolve network problems quickly and improve system reliability.

## SPECIFICATIONS

### Case Dimensions

|         |          |           |
|---------|----------|-----------|
| Height: | 3.5"     | (8.9 cm)  |
| Width:  | 2.1"     | (5.4 cm)  |
| Depth:  | 3.4"     | (8.7 cm)  |
| Weight: | 0.75 lbs | (0.34 kg) |

### Electrical

|                |                 |
|----------------|-----------------|
| Input Voltage: | 10-30 VDC       |
| Input Current: | 250 mA@24V      |
| BTU/hr:        | 20.5@24 VDC     |
| Inrush:        | 10Amp/0.9ms@24V |

### Environmental

|                        |                             |
|------------------------|-----------------------------|
| Operating Temperature: | -20°C to 70°C               |
| Storage Temperature:   | -40°C to 85°C               |
| Operating Humidity:    | 10% to 95% (Non Condensing) |
| Operating Altitude:    | 0 to 10,000 ft.             |

### Shock and Vibration (bulkhead mounting)

|                    |                        |
|--------------------|------------------------|
| Shock:             | 200g @ 10ms            |
| Vibration/Seismic: | 50g, 5-200Hz, Triaxial |

### Network Media

|             |               |
|-------------|---------------|
| 10BaseT:    | ≥Cat3 Cable   |
| 100BaseTX:  | ≥Cat5 Cable   |
| 100BaseFX : |               |
| Multimode   | 50-62.5/125µm |
| Singlemode  | 7-10/125µm    |

### Connectors

|               |                               |
|---------------|-------------------------------|
| 10/100BaseTX: | Four (1) RJ-45 TX Ports       |
| 100BaseFX:    | Two (2) ST or SC Duplex Ports |

### Recommended Wiring Clearance

|        |               |
|--------|---------------|
| Front: | 4" (10.16 cm) |
| Top:   | 1" (2.54 cm)  |

## Fiber Transceiver Characteristics

| Fiber Length       | 2km*   | 15km** | 40km** | 80km** |
|--------------------|--------|--------|--------|--------|
| TX Power Min       | -19dBm | -15dBm | -5dBm  | -5dBm  |
| RX Sensitivity Max | -31dBm | -31dBm | -34dBm | -34dBm |
| Wavelength         | 1310nm | 1310nm | 1310nm | 1550nm |

\* Multimode Fiber Optic Cable  
 \*\* Singlemode Fiber Optic Cable

## BENEFITS

### Industrial Network Switch

- Compact Size, Small Footprint
- High Reliability/Availability
- Extended Environmental Specifications
- Ruggedized DIN-Rail Enclosure
- High Performance
- High MTBF >2M Hours (measured)

### Ease of Use


- Plug & Play Operation
- Four Auto Sensing 10/100BaseTX RJ-45 Ports
- Auto Sensing Duplex, Speed and Cable Type
- Unmanaged Operation
- Compact DIN-Rail Package

### Increased Performance

- Full Wire Speed Capable
- 100BaseFX Fiber Uplink
- Full Duplex Capable
- Eliminates Network Collisions
- Increases Network Determinism
- N-View Switch Viewing Option

### Regulatory Approvals

FCC Part 15 Class A  
 UL Listed 1604 (US and Canada)  
 CLASS I, DIV 2, GROUPS A,B,C,D,T4A  
 CE: EN61000-6-2,4, EN55011, EN61000-4-2,3,4,5,6  
 ABS Type Approval for Shipboard Applications  
 GOST-R Certified  
 RoHS Compliant

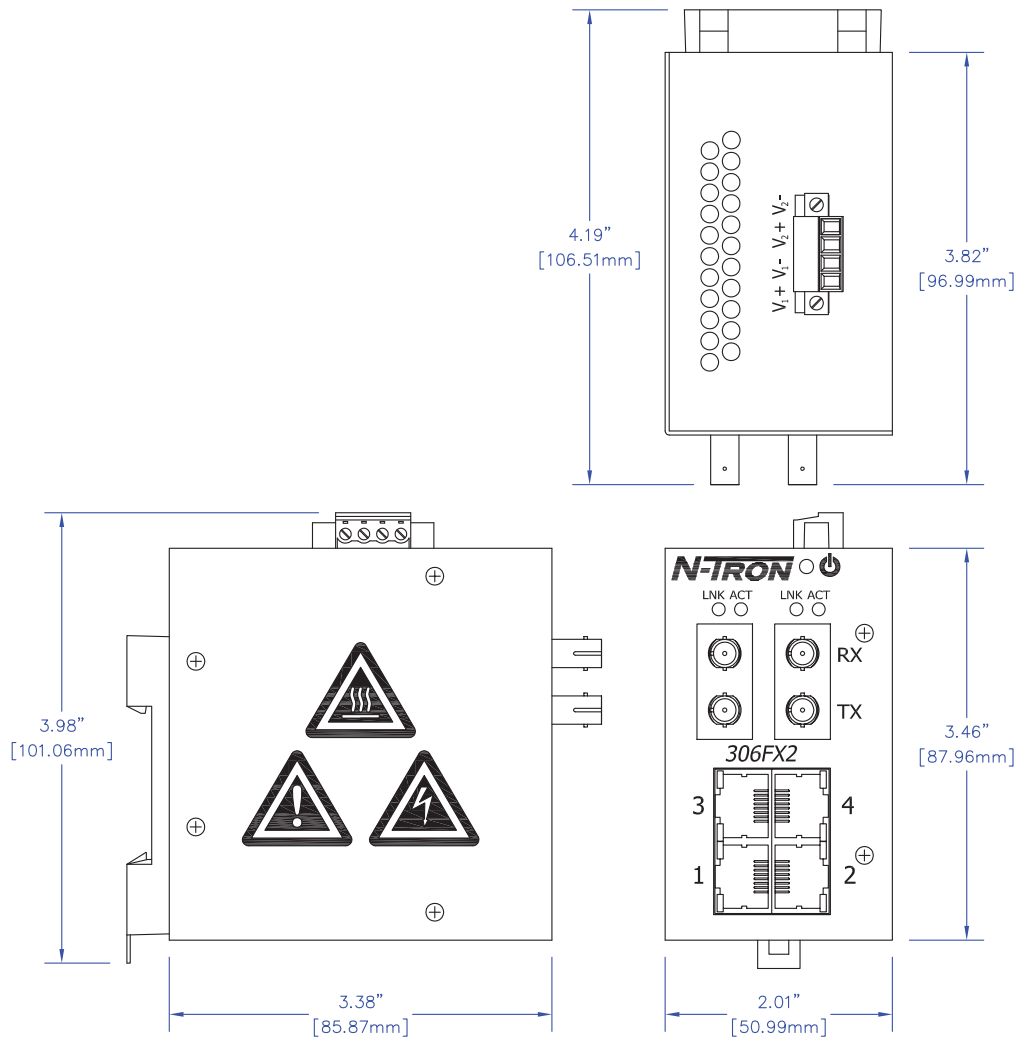

## ORDERING INFORMATION

| PART NUMBER           | DESCRIPTION   |
|-----------------------|---|
| 306FX2-N-XX .....     | 6-port (4 10/100BaseTX, 2 100BaseFX Fiber Uplinks) Industrial Ethernet Switch; DIN-Rail mount; Multimode; with N-View technology  |
| 306FX2-XX .....       | 6-port (4 10/100BaseTX, 2 100BaseFX Fiber Uplinks) Industrial Ethernet Switch; DIN-Rail mount; Multimode                          |
| 306FXE2-N-XX-YY ..... | 6-port (4 10/100BaseTX, 2 100BaseFX Fiber Uplinks) Industrial Ethernet Switch; DIN-Rail mount; Singlemode; with N-View technology |
| 306FXE2-XX-YY .....   | 6-port (4 10/100BaseTX, 2 100BaseFX Fiber Uplinks) Industrial Ethernet Switch; DIN-Rail mount; Singlemode                         |
| URMK .....            | 19" Universal Rack Mount Kit  |
| 900-PM .....          | Panel Mount Kit   |
| NTPS-24-1.3 .....     | N-TRON Power Supply - (1.3 Amp @ 24VDC)   |

Where: N = N-View Firmware Option  
E = Singlemode  
XX = ST for ST style fiber connector, SC for SC style fiber connector  
YY = Segment length:  
15 for 15km max. fiber segment length  
40 for 40km max. fiber segment length  
80 for 80km max. fiber segment length

N-TRON USA & Corporate Headquarters  
820 S. University Blvd • Suite 4E  
Mobile, AL 36609 • USA  
Phone +1-251-342-2164  
Fax +1-251-342-6353

[www.n-tron.com](http://www.n-tron.com)

N-TRON ASIA PACIFIC  
CHINA  
Phone +86 (0) 21-6113-3688  
Fax +86 (0) 21-6113-3683

INDIA  
Phone +91-9844-876540

SINGAPORE  
Phone +65-8118-6821

N-TRON EMEA  
Phone +41-41-740-6636  
Fax +41-41-740-6637

N-TRON UK/IRELAND/NORDIC/BENELUX  
Phone +44 (0) 1928-577257

please visit us worldwide at [www.n-tron.com](http://www.n-tron.com)

© 2011 N-TRON Corporation. N-Tron and the N-Tron logo are trademarks of N-TRON, Corporation. Product names mentioned herein are for identification purposes only and may be trademarks and/or registered trademarks of their respective company. The responsibility for the use and application of N-Tron products rests with the end user. N-Tron makes no warranties as to the fitness or suitability of any N-Tron product for any specific application. N-Tron Corporation shall not be liable for any damage resulting from the installation, use, or misuse of this product. Specifications subject to change without notice. REV 2011.03.18

**QUALITY MANAGEMENT SYSTEM**

**CERTIFIED BY DNV**

**ISO 9001:2008**