



G1902HFC Safety Station with Eyewash, Hand and Foot Control, Stainless Steel Bowl G1902P-HFC Safety Station with Eyewash, Hand and Foot Control, Plastic Bowl

Application: Combination eyewash and shower safety station. Eyewash is activated by flag handle or foot treadle and features two GS-Plus™ spray-type outlet heads that deliver a flood of water for rinsing eyes.

Shower Head: 10" diameter orange ABS plastic with 20 GPM flow control.

Shower Valve: 1" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Furnished with stainless steel actuating arm and 29" stainless steel pull rod.

Spray Head Assembly: Two GS-Plus[™] spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from water flow.

Eyewash Bowl: 11-1/8" diameter stainless steel (G1902HFC) or 11-3/4" diameter orange ABS plastic (G1902P-HFC).

Eyewash Valve: 1/2" IPS chrome plated brass stay-open ball valve. Valve is US-made with chrome plated brass ball and PTFE seals. Valve is activated by flag handle or foot treadle. Unit remains in operation until handle is returned to closed position.

Pipe and Fittings: Schedule 40 galvanized steel. Furnished with orange polyethylene pipe covers for high visibility and corrosion resistance.

Supply: 1-1/4" NPT female top or side inlet.

Waste: 1-1/4" NPT female outlet.

Sign: ANSI-compliant identification sign.

Quality Assurance: Valve and spray head assemblies are factory assembled and water tested prior to shipment.

Available Options

6040 Thermostatic mixing valve precisely blends hot nd cold water to deliver tepid water as required by NSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" ection for complete technical and product selection of the formation.
itormation.

GC Powder coated finish on galvanized pipe and fittings. Available colors include orange, yellow, red and green.


GRN Green ABS plastic shower head.

YEL Yellow ABS plastic shower head.

SSH Stainless steel shower head.

AP275-200 Electric flashing light and alarm horn unit for mounting on wall or vertical pipe. Light illuminates and horn sounds when eyewash or shower is activated. Furnished complete with flow switch and mounting hardware.


AP250-015 Modesty curtain for mounting on safety station.

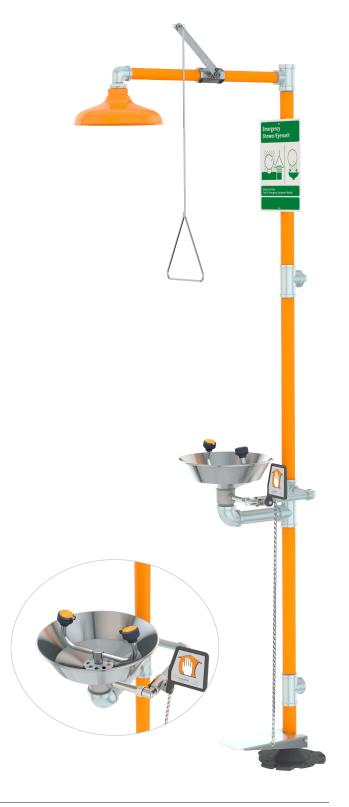





☐ G1902HFC Safety Station with Eyewash, Hand and Foot Control, Stainless Steel Bowl☐ G1902P-HFC Safety Station with Eyewash, Hand and Foot Control, Plastic Bowl

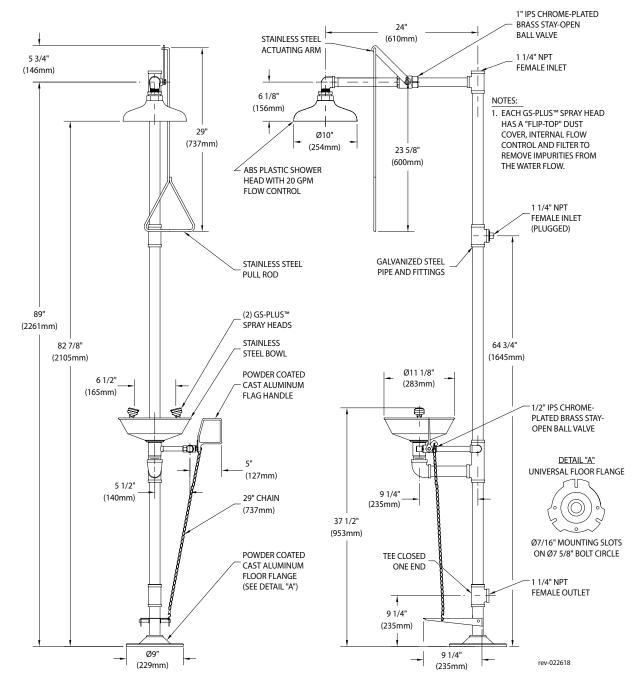

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are \pm 1/4" (6mm). rev. 012219

Sign Included

